

56404

Distr. LIMITED

ECA/NRD/CART.9/USA.2
October 1996

Original: ENGLISH

**Ninth United Nations Regional
Cartographic Conference for Africa**

**Addis Ababa, Ethiopia
11-15 November 1996**

**A GLOBAL APPROACH TO UPDATE THE
BATHYMETRIC DATA AND NAUTICAL CHART DATUMS**

**Ninth United Nations Regional
Cartographic Conference for Africa**

**Addis Ababa, Ethiopia
11-15 November 1996**

**A GLOBAL APPROACH TO UPDATE THE
BATHYMETRIC DATA AND NAUTICAL CHART DATUMS**

Submitted by the United States of America

PLEASE NOTE:

The tables/figures listed below are attached to the end of the technical paper titled “A Global Approach to Update the Bathymetric Data and Nautical Chart Datums” (attached to this note). These tables/figures could not be reproduced into a Wordperfect 6.1 file.

These tables/figures will need to be xeroxed as they are a very important part of the technical paper.

Table 1--Tide Tables

Table 2--Accuracy Standards for Soundings

Figure 1--Tidal Surfaces Levels, Heights, and Depths

Figure 2--Surveying the Time-Independent Bathymetry

Figure 3--Surveying the Depth Clearance

Figure 4--Surveying the Height Clearance

Figure 5--Surveying the Zero Height of the Tidal Staff

Thank you.

A GLOBAL APPROACH TO UPDATE THE BATHYMETRIC DATA AND NAUTICAL CHART DATUMS

**Dr. Muneendra Kumar
Defense Mapping Agency
8613 Lee Highway
Fairfax, Virginia 22031 (USA)**

SUMMARY

Currently, there are hundreds of nautical chart datums and zero references to define bathymetry or depths in use all over the world. In the case of datums, the situation is still more complicated by the lack of agreement on the definition(s) by different countries which in turn jeopardizes the safety of international navigation.

Further, the tidal surfaces used in the vertical datums to define elevations and bathymetry or depths are time-variant and do not have a common zero. This generates slopes between and along coast lines and prevents creation of consistent data sets for global usage.

This paper presents a new concept and practical approach for defining and surveying a time-invariant bathymetry and globally consistent zero reference surface for chart datums. The recent availability of a super accurate geoid provides a solution to update the old into globally usable new. Details have also been included on how to realize this zero reference surface and use the same in real time navigation using Global Positioning System (GPS). Not to revert back to a similar situation, which we have in use of tidal surfaces, it would also be necessary to avoid the use of different regional geoids.

A GLOBAL APPROACH TO UPDATE THE BATHYMETRIC DATA AND NAUTICAL CHART DATUMS

**Dr. Muneendra Kumar
Defense Mapping Agency
8613 Lee Highway
Fairfax, Virginia 22031 (USA)**

INTRODUCTION

In the complex mapping, charting, and geodetic world, there are hundreds of vertical datums in use. Some datums are properly defined, while in some cases there is hardly any validity in the definition. For many others, information is not available that can be used to determine an accurate height in the local system.

In the above environment, the definitions of the nautical chart datums and the depiction of all other related information useful for safe navigation to avoid underwater and/or overhead hazards vary from one chart to another, coast to coast, between charting agencies, and also between countries. Further, in the hydrographic usages, statements like, "Owing to the many varied tidal characteristics, a precise scientific definition for chart datum, which could be used universally, has not been agreed upon" (IHO, 1993), can still be found. This situation arises due to our age old practice of measuring various time-dependent mean ocean surfaces, such as Mean High Tide (MHT), Mean High Water (MHW), Mean Lower Low Water (MLLW), Mean Sea Level (MSL), Mean Higher High Water (MHHW), Mean Low Water (MLW), Low Water (LW), High Water (HW), etc., and then due to our efforts to use such tidal surfaces in relating them to land and nautical chart datums in depicting heights or ocean depths.

The above approach can and has varied from one country to another country and is dependent on the adopted definitions and tide models, surveying techniques, and durations (for computing "means"), and instruments. As the sea level changes can be excessive and are also time-dependent, the knowledge of accurate tide modeling, which is always complex, becomes critical. Thus, in this complex and difficult to measure time-dependent scenario, it is quite obvious why internationally it would be difficult to agree to a common datum for nautical charts and ocean depths.

However, we now have the capability to compute a geoid of very high accuracy over ocean areas and thus define accurate nautical chart vertical datum without using time-dependent tidal surfaces. Also, the availability of the Global Positioning System (GPS) makes it easy to establish this vertical chart

datum, survey such depths in the field, and depict them on charts. Then, reversing the survey mode, these charted depths can be realized in real-time during navigation to check depth clearances to avoid ship grounding.

This paper presents a new concept to define a nautical chart vertical datum completely non-dependent on time, to establish the same through GPS surveys, and also to realize the sea floor depths during navigation. The approach thus eliminates the necessity for the time-dependent sea level and other tidal data as the primary source of information for navigation.

1. CURRENT TIDAL LEVELS

Figure 1 shows an illustrative depiction to define various tidal levels and charted data as this information is currently in use by some countries (NOAA, 1990), if not by all. For example, use of the Lowest Astronomical Tide (LAT) as the vertical datum in charts is increasing. There are some interesting conflicts and deviations between various definitions which mariners would have a hard time understanding and correctly interpreting, especially when hard pressed for time and faced with little margin for error. A few typical examples of such cases are:

- (1) Use of MLLW as chart datum (CD) to depict charted depths versus use of chart LW (drying) line to depict drying heights.
- (2) Use of Charted HW (coastal) line as land survey datum to depict charted heights. Here, MSL is shown separately, even though all the land vertical datums worldwide are defined with respect to it.
- (3) Both MHW and MHHW are shown differently than charted HW (coastal)
- (4) While charted depths are defined with respect to MLLW, the charted vertical clearances are defined with respect to MHW, and not to MHHW. This definition may leave MHHW practically with no application, at least in Figure 1.

In Figure 1, the "height of tide" is defined with respect to MLLW (CD), while Tide and Current Glossary (NOAA, 1989) does not define this important item. Further, this glossary includes Half-Tide Level, also called Mean Tide Level, to define a tidal datum which is midway between MHW and MLW; but the same is not included in Figure 1.

Table 1 (NOAA, 1990) shows a typical tide table where tidal levels are related to "Datum of Soundings" and a user will then have to solve or interpret a newer set of terms like MHWS, MHWN, MLHW, and MHLW. To make the usage of available information more complex and thus more difficult to interpret correctly, the note in Table 1 indicates that the order of the included tidal levels, as referred to all the datums of soundings, may be different in national tables and thus the involved definitions of these terms may also be different (IHO, 1993).

Another important aspect in all of the above complexity of terminology and definitions is that all this information may also be time-dependent.

2. DEFINING TIME-INVARIANT ZERO REFERENCE SURFACE

On land, the orthometric heights or elevations are defined theoretically with respect to the geoid. However, in the past, due to our limitations to compute and establish the geoid with the desired accuracy, the Mean Sea Level (MSL) was and is still used to approximate the geoid, though the MSL does not coincide with an equipotential surface. Another complication in using MSL to define a vertical datum is that it deviates from coast to coast, both in east-west and north-south directions. There are cases when the MSL has been very poorly "measured" in defining zero surface for the vertical datums and related elevations. In ocean areas, the bathymetric data, as available currently, is related to a zero reference surface which may be even more poorly defined than MSL for the land areas.

In view of our present capability with the newer technology and availability of accurate observed data sets, the geoid over ocean areas can now be computed easily with absolute accuracy of about ± 25 -30 cm. All indications reflect that this accuracy may be even better in the near future. It is thus proposed to utilize the geoid as the zero surface for the nautical chart datum and reference all bathymetric data to it. This adoption or referencing, in turn, will provide a non-time dependent and globally consistent definition and facilitate easy integration of different data sets originating from newly surveyed projects under this definition.

Another important point, which requires clarification under the proposed concept is that the geoid referred is defined by the equation:

$$W(X,Y,Z) = W_0 \quad (1)$$

where the $\sim W \sim$ is the earth's total gravity potential and " W_0 " the geoid constant as specified by the International Association of Geodesy (Moritz, 1980). The computational task of such a high absolute accuracy geoidal solution using extensive data sets with coverage from all over the globe would be a very costly and time consuming effort. To eliminate conflicts between too many zeros, use of regional geoidal solutions will have to be avoided and to ensure consistent high accuracy, worldwide proliferation of too many solutions must be checked. To achieve these two desirable goals, Institutions like the International Hydrographic Organization (IHO), the International Maritime Organization (IMO), International Geoid Commission (IGC), and International Federation of Surveyors (FIG) would play an extremely important role in coordination and adoption of an accurate global geoidal solution by all.

3. SURVEYING CONSISTENT BATHYMETRY

Figure 2 illustrates a typical survey scenario using GPS. In open and deep ocean areas, where accuracy of measured depths will be less critical, the ship position to establish the ellipsoidal height

(h) can be surveyed with GPS in navigation or single point positioning mode. As the survey scenario would approach the coast with shallower water depths, high accuracy requirements would also become more critical. In such cases, the ship's ellipsoidal height (h) would be established or surveyed with differential GPS technique where the survey can be designed to achieve desired higher accuracies in "h".

The surveyed ellipsoidal heights (h) of the ship can provide the h_p of the sea surface, which when combined with the computed geoidal height (N_p), would give the orthometric height (H_p) as:

$$H_p = h_p - N_p \quad (2)$$

Then, at the same epoch, the ship measures through sounding the distance S_p . Combining the S_p with sea surface orthometric height H_p (using equation 2), the depth D_p can be computed as:

$$D_p = S_p - H_p \quad (3)$$

While the surveyed h_p and S_p and computed H_p would be time variant with the moving sea surface, the geoidal height (N_p) and computed depth (D_p) would be time-independent. Further, as the heights h_p and N_p would be established in the globally consistent World Geodetic System (WGS) 1984 used by GPS, the measured depth D_p through ship's soundings would also be defined with respect to the WGS 84 geoid (DMA, 1991).

Once an area is surveyed with all the depths referenced to the WGS 84 geoid, the information can be utilized to contour the nautical charts. The data can also be stored as individual depths in the digital data base and will also be available for use with the digital charts.

4. RECOVERING DEPTH AND HEIGHT CLEARANCES DURING NAVIGATION

a. Depth Clearance:

While navigating in an area with its nautical chart plotted and contoured for depths (Section 4.), the height (H_p), using the GPS surveys and the computed geoidal height (N_p), depth (D_p) and the ship's hulk (HL) are configured in Figure 3.

A measure of depth clearance (or the safe distance between the ship's bottom and the sea floor) will then be given as:

$$HL < H_p + D_p \quad (4)$$

A new measurement of sounding (S_p) at the sailing time will then provide a check on the plotted depth D_p on the chart.

b. Height Clearance:

While navigating in an area with its nautical chart plotted for height clearance, the height (H_p), using the GPS surveys and the computed geoidal height (N_p), the height (H_B) of a bridge and length of the ship's mast (H_M) are configured in Figure 4.

A measure of height clearance (or the separation between the highest point of the ship's mast and the bridge bottom) will then be given as:

$$H_M < H_B - H_p \quad (5)$$

It is important to point out that the distance from the sea surface to the GPS antenna would be a measured correction in all of the above relationships.

5. RELATING THE TIDAL SURFACES

At any tidal station, the absolute zero of the tidal staff can be established with the GPS absolute point positioning survey at a nearby station and with differential leveling to the staff (Figure 5). Its orthometric height $H (= h - N)$ set to the geoidal zero will be consistent all over the globe.

Then, all the tidal surfaces, e.g., MLLW, MLW, MSL, MHW, can be surveyed with respect to the zero of the tidal staff or to the geoid and used with consistent definition worldwide as auxiliary information with the time-invariant bathymetry.

Though the tidal surfaces will be tied to the same zero as the elevations and depths determined with the GPS surveys and a global geoid, it is emphasized that the tidal measurements and/or reductions would not be required when navigating with GPS fixings and using depths which are referenced to the geoid.

6. EVALUATING THE NEW CONCEPT

The proposed use of the geoid as the zero reference for a global vertical datum will enable us to integrate and analyze the depth and elevation data over the sea and land interface. It will also eliminate the numerous existing local tidal datums which are in use around the world.

However, the adoption of a new vertical datum would raise an immediate issue of what to do with the existing data sets based on the numerous tidal datums, each with its own definition and how to save this valuable information.

One solution for the integration of the existing data sets is datum transformations but this method would not improve the quality and accuracy of the data based on the numerous tidal and chart datums. However, it would definitely help in utilizing the existing information till the new and more

accurate data sets are surveyed and integrated under consistent, time-invariant, and accurate definition.

It is also noted that the proposed method to determine the depths with respect to the geoid also involves the sounding data and the accuracy of final results would require accurate acoustic modeling. As the issue concerning the accuracy of the soundings is not a new one, the improvement in the acoustic modeling should be considered as an area for future research (Section 4.).

7. ACCURACY ESTIMATION

In Figure 2, in offshore areas the ellipsoid height (h) can be surveyed using differential GPS with an accuracy of + or - 1 meter in routine field surveys. Also, the achievable accuracy of geoid over ocean areas would be within the desired range of about 25 cm in the near future, even though some doubts may still exist about the accuracies of the current geoidal model(s).

The above two estimates shift the emphasis to the sounding measurements and their associated accuracy which would impact the final accuracy of the bathymetric data. The Table 2, extracted from a National Oceanic and Atmospheric Administration publication (NOAA, 1978), is one such example which specifies the accuracy standards for sounding measurements during field surveys. Another important document, which specifies international standards and classification criteria for hydrographic surveys and soundings, is the IHO Special Publication No. 44 (IHO, 1987).

Though the above table or the IHO publication specifies the desired accuracy requirements, standards, and classifications for soundings and related hydrographic surveys, the users would still be concerned about the accuracy actually achieved and/or obtained during any marine field survey over an area, especially when one would consider all the rapidly varying environmental conditions and use of different definitions. Thus, under the newly modified and more accurate survey scenarios with GPS techniques, the new concept of global geoid, and the measuring of ship's soundings with modern instruments, a complete revision of achievable accuracies and specifications for the GPS and marine surveys and soundings, and setting of new international standards would also become an immediate necessity.

8. SUMMARY

The practical complexity and difficulties arising from the use of numerous vertical datums and various time-dependent tidal surfaces with inconsistent definitions are impeding the correct integration of valuable information. All this also affects safe navigation over international waters.

The new concept of the geoid as the zero reference surface for the time-invariant bathymetry and elevations is practical and also realizable with sufficient accuracy using current technology and available data sets. The computation of a modern global geoid with an absolute accuracy of ± 25 cm is a costly project, but to accomplish the same now would be very timely. Problems arising from use of various relative and regional solutions and also of different global geoids with lower accuracies would have to be avoided. Use of local geodetic datums for differential GPS surveys would be another dangerous and critical problem. If the new survey data is not properly coordinated and collected under standardized specifications, the present complexity may crop up in a different form. Finally, tide tables will still be important to keep the mariner advised as to whether the water level is rising or falling, and the amount of change to be expected.

REFERENCES

1. DMA, 1991. "Department of Defense World Geodetic System 1984, Its Definition and Relationship with Local Geodetic Datums," DMA TR 8360.2. Second Edition, Defense Mapping Agency, Fairfax, VA.
2. IHO, 1987. "IHO Standards for Hydrographic Surveys Classification Criteria for Deep Sea Soundings and Procedures for Elimination of Doubtful Data," Special Publication. No. 44, International Hydrographic Organization, Monaco.
3. IHO, 1993. "A Manual on Technical Aspects of the United Nations Convention on the Law of the Sea - 1982," Special Publication 51, International Hydrographic Organization, Monaco.
4. Moritz, H., 1980. "Fundamental Geodetic Constants," Report of the Special Study Group 5.39, International Association of Geodesy, Paris, France.
5. NOAA, 1989. "Tide and Current Glossary", National Oceanic and Atmospheric Administration, Silver Spring, MD.
6. NOAA, 1990. "Nautical Chart Symbols Abbreviations and Terms," USA Chart No. 1, National Oceanic and Atmospheric Administration, and Silver Spring, MD, and DMA Hydrographic/Topographic Center, Bethesda, MD (Joint Pub).

TABLE 1

Tide Tables										
30	Tidal Levels referred to Datum of Soundings					<p><i>Tabular statement of semi-diurnal or diurnal tides</i></p> <p><i>Note:</i> The order of the columns of levels will be the same as that used in national tables of tidal predictions.</p>				
	Place	Lat N	Long E	Heights in meters above datum						
				MHWS	MHWN		MLWN	MLWS		
			MHHW	MLHW	MHLW	MLLW				
31				Tidal stream table		<p>Tidal streams referred to ..</p> <table border="1"> <thead> <tr> <th>Hours</th> <th>Compassual Position</th> </tr> </thead> <tbody> <tr> <td> Before High Water After High Water Before Low Water After Low Water </td> <td> Directions of streams (degrees) Rules at spring tides (points) Rules at neap tides (points) </td> </tr> </tbody> </table>	Hours	Compassual Position	Before High Water After High Water Before Low Water After Low Water	Directions of streams (degrees) Rules at spring tides (points) Rules at neap tides (points)
						Hours	Compassual Position			
Before High Water After High Water Before Low Water After Low Water	Directions of streams (degrees) Rules at spring tides (points) Rules at neap tides (points)									

Table 2
Accuracy Standards for Soundings

Water Depth	Allowable Errors
0 - 20 meter	0.3 meter
20 - 100 meter	1 meter
> 100 meter	1% of Depth

Tidal Levels and charted Data

Tide gauge → T

20

Planes of reference are not exactly as shown below, for all charts. They are usually defined in notes under chart titles.


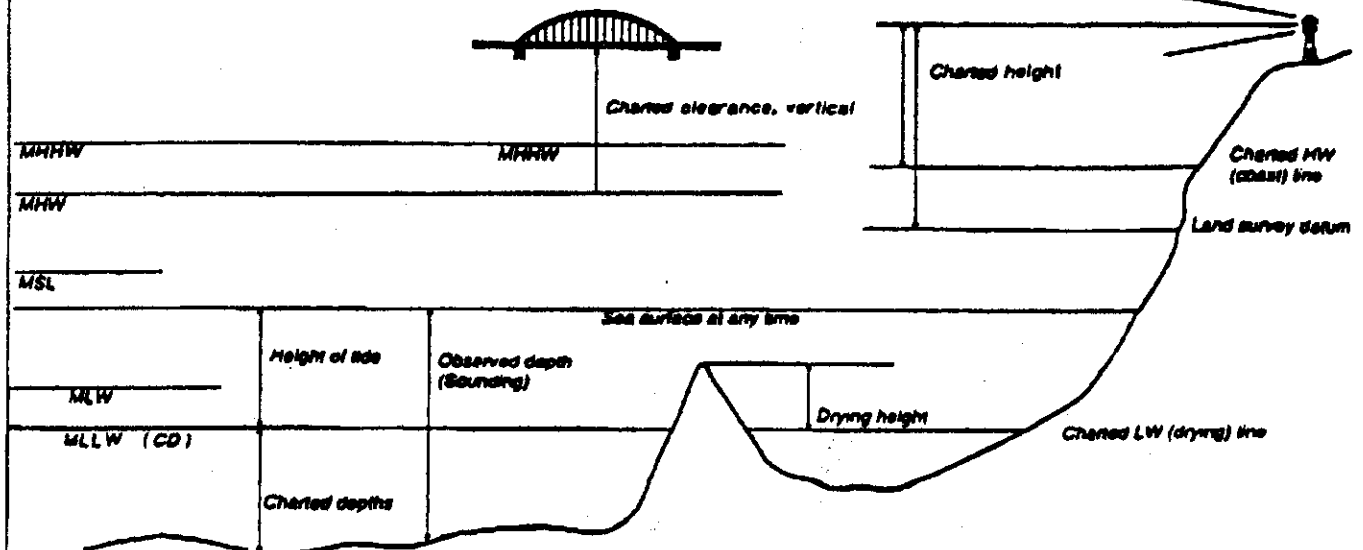


Figure 1. Tidal Surfaces Levels, Heights, and Depths.

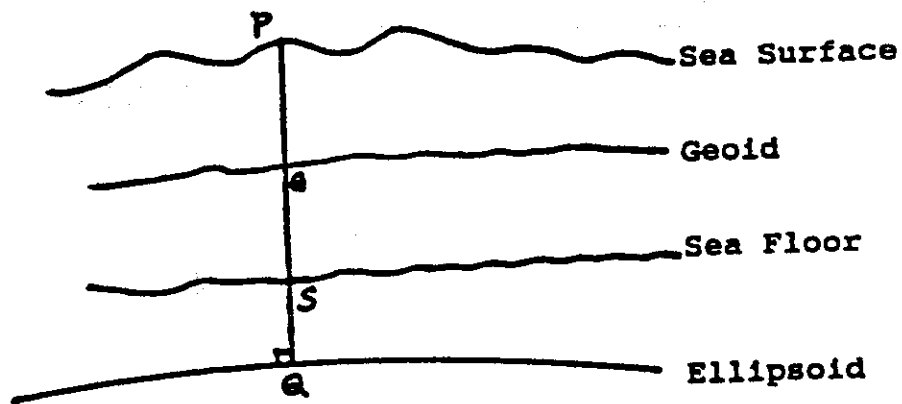

- PQ = Ellipsoidal height (h) of the survey ship surveyed with GPS
- GQ = Geoidal height (N) computed with the Earth Gravity Model (EGM)
- PS = Sounding (S) measured acoustically from the survey ship
- GS = Depth of sea floor (D) from the geoid

Figure 2. Surveying the Time-Independent Bathymetry

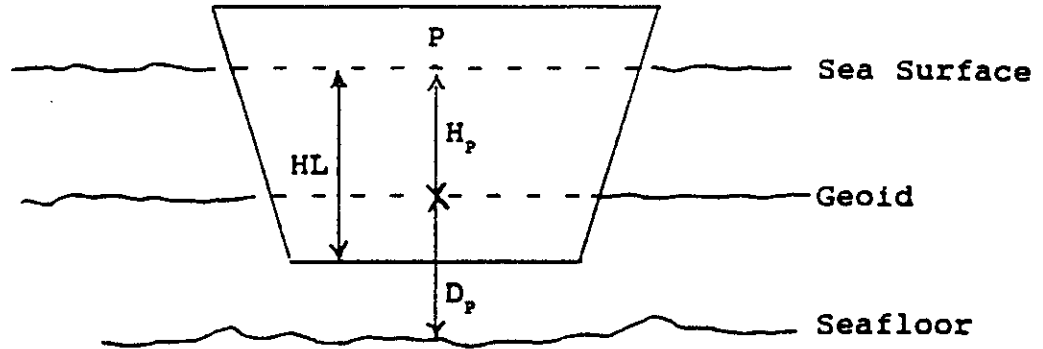


Figure 3. Surveying the Depth Clearance

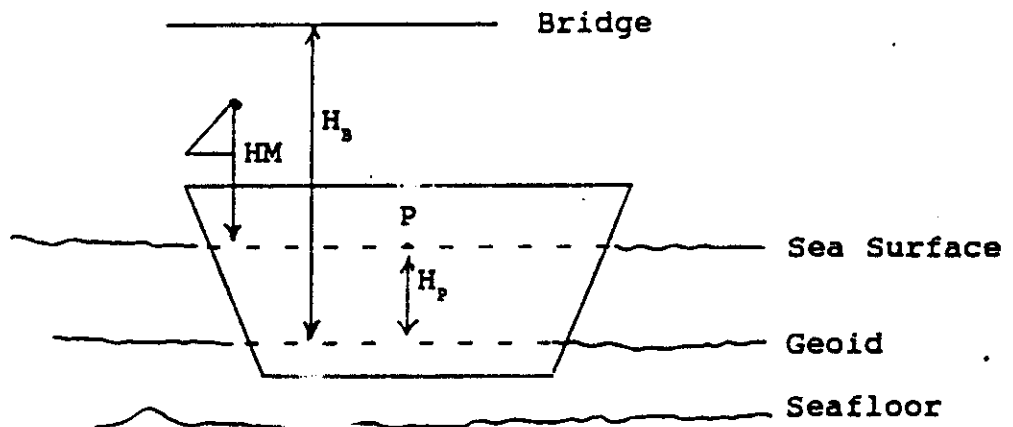


Figure 4. Surveying the Height Clearance

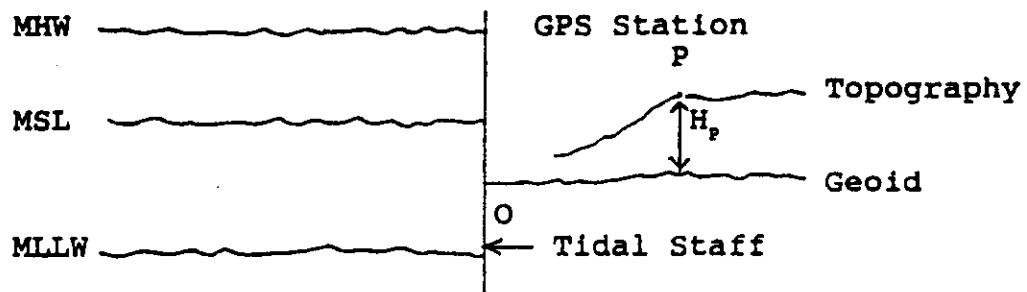


Figure 5. Surveying the Zero Height of the Tidal Staff